


Flowback Training Guide

Scout Flowback Training Guide

Getting Started	3
Overview	3
System Requirements	4
Stop Configuration	4
Configuring a Location	4
Access to the Configured Stop	5
Initial Flowback Setup	6
Flowback Entry	7
Entering Flowback Data	7
Flowback Insights	8
Visualization of Data	8
Flowback Reports	9
Users	10
Setting up a Flowhand	10
FAQ/Support	11

Getting Started in Scout

Please use Google Chrome when signing into your web portal. Each user will have their own unique username and password.

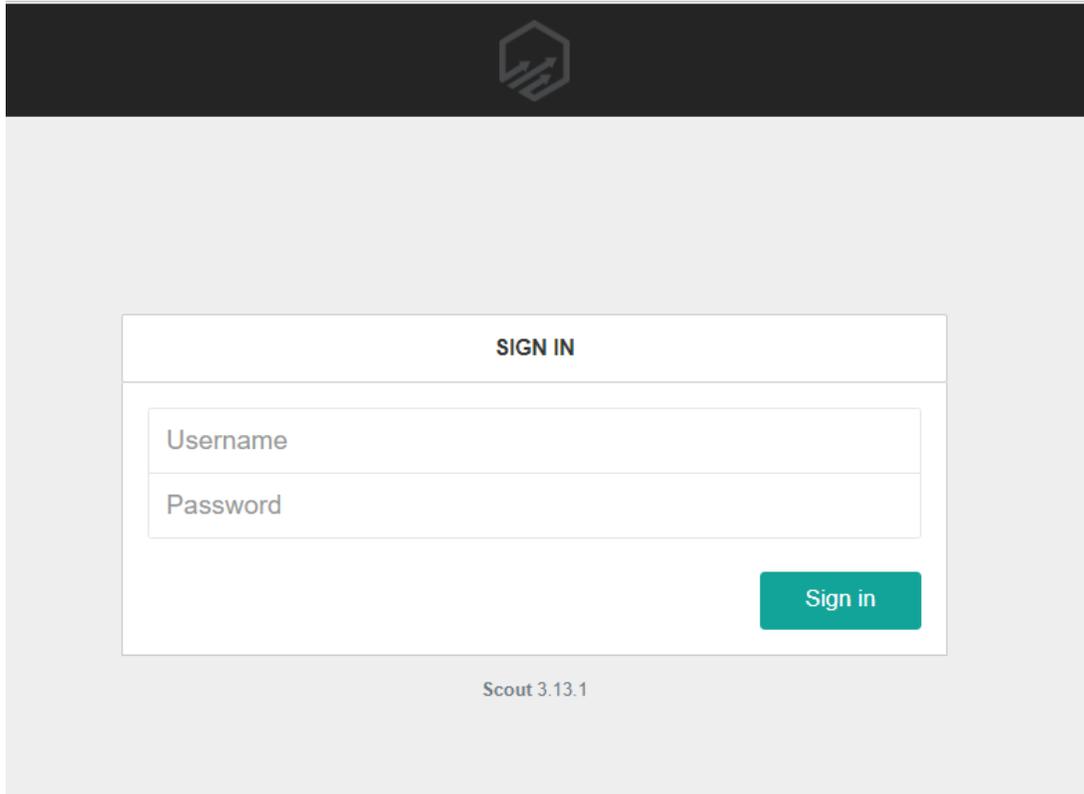A screenshot of the Scout web portal's sign-in page. At the top, there is a black header bar with a white hexagonal logo containing a stylized 'S' and 'C'. Below the header is a light gray background. In the center, there is a white rectangular sign-in form. The form has a title 'SIGN IN' at the top. Below the title are two input fields: 'Username' and 'Password'. To the right of the 'Password' field is a teal 'Sign in' button. At the bottom center of the page, below the form, is the text 'Scout 3.13.1'.

Overview

To log into the Scout web portal, enter the provided URL into a Google Chrome browser. You will then enter your provided username and password. The Flowback module is designed to track the amount of fluids that are recovered after hydraulic fracturing is performed. This module allows for the entry of flowback data on an hourly basis and performs calculations as the data is entered.

System Requirements


In order to use the Flowback module, the following items are required:

- The user must be an existing user within Scout, valid username and password are required.
- A cellular or WiFi internet connection is needed.
- The user's profile must have the necessary permissions to enter and view Flowback data.

Stop Configuration

Configuring a Location


To configure a stop for Flowback, expand Routes within the black Navigation panel on the left side of the screen. Click on the route the well is associated to and then click on the well within the route list. Navigate to the Configuration tab within the Stop Detail page. You will notice options for both Daily and Flowback entry in the top right corner. Toggle the slider to the on position to enable Flowback collection for this stop. Be sure to **save** the change at the bottom of the screen.

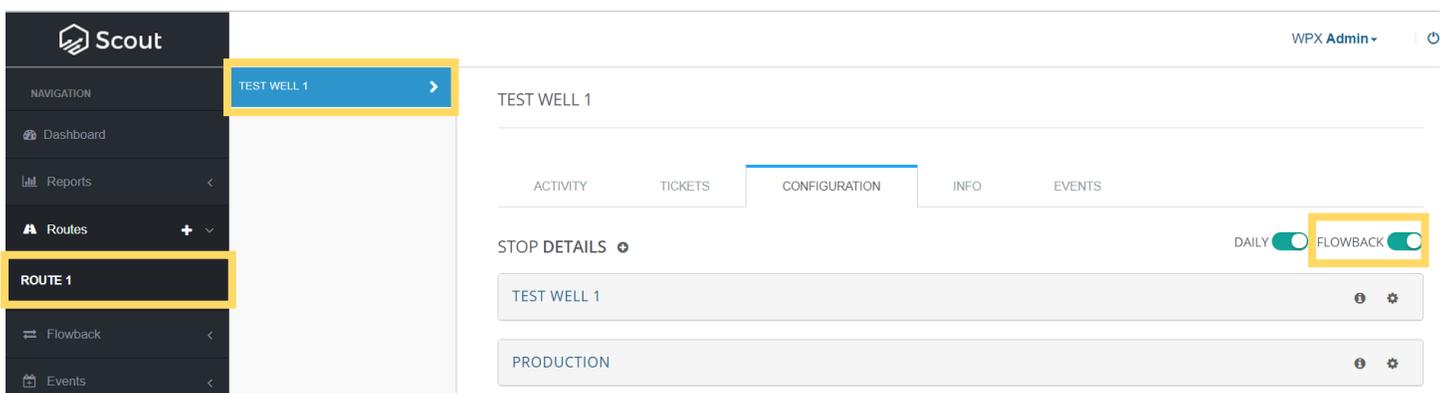

Once the change has been saved, the well will now be visible within the Flowback module in the Navigation panel.

Access to the Configured Stop

The Flowback module is located within the left primary navigation. Simply click the Flowback option to view all available Stops configured for Flowback. Select the configured Stop.

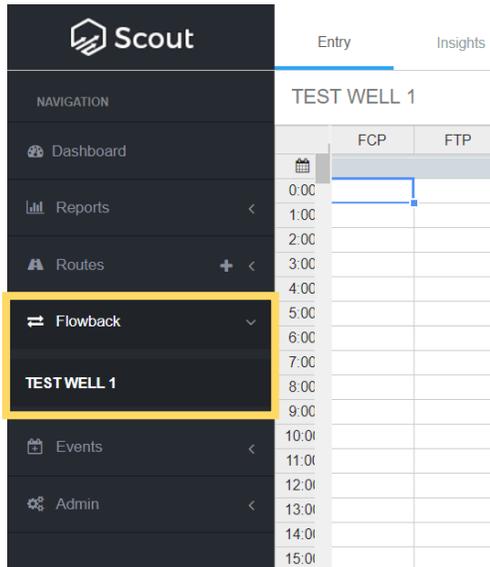

For security reasons, access to the Flowback option is restricted to those users that have been assigned as the Flowhand or given either the “Ability to view and edit Flowback on the web” or “Ability to view Flowback on the web”. These permissions can be updated, as needed, within the Users section of the Admin module.

Ability to view and edit flowback on the web	<input checked="" type="checkbox"/>
Ability to view flowback on the web	<input checked="" type="checkbox"/>

Initial Flowback Setup

Once a Stop is configured, navigate to the Stop within the Flowback navigation option and click the two left arrows to expand the Flowback Details section.

The screenshot displays the 'Flowback Details' configuration panel for 'TEST WELL 1'. The panel includes the following fields:

- Frac Water Pumped:** A text input field with a blue '#' icon on the right.
- Start Date:** A date picker set to 11/19/2018.
- End Date:** A date picker set to 12/03/2018.
- Flowhands:** A dropdown menu with 'Select...' as the current selection.

The 'CONFIGURATION' dropdown menu is highlighted with a yellow box. The main data table below has columns for FCP, FTP, Braiden Head, Separator PSI, Line PSI, Drill Out Inj F, Choke Size, BOPH, BOPD, Cum. Oil, Gas Lift Inj, Gas Prod Wt, Gas Prod Re, Cum. Gas Pt, Gas Prod Ra, and Water Pump.

The following items must be set before data entry within the Configuration section.

1. **Start and End Dates** must be entered to ensure the appropriate number of data entry points can be established. The End Date can be extended, as needed.
2. **Frac Water Pumped** must be populated to ensure the calculated values are performed correctly.
3. **Flowhands** need to be assigned in order to give access to the user recording data.

Important: Please be sure to save the changes in the bottom right corner of the screen before entering data.

Flowback Entry

Entering Flowback Data

The Flowback entry screen will look similar to the screenshot below.

The screenshot displays the 'Flowback Entry' interface for 'TEST WELL 1'. The interface includes a header with 'Entry' and 'Insights' tabs, and a user profile 'WPX Admin'. The main area is a data entry table with the following columns: FCP, FTP, Braiden Heat Separator P, Line PSI, Drill Out Inj F, Choke Size, BOPH, BOPD, Cum. Oil, Gas Lift Inj, Gas Prod W, Gas Prod Re, Cum. Gas Pr, Gas Prod Ra, and Water Pump. The rows represent time intervals from 0:00 to 22:00. The table is color-coded: green for oil-related data (BOPH, BOPD, Cum. Oil), blue for water-related data (Water Pump), red for gas-related data (Gas Lift Inj, Gas Prod W, Gas Prod Re, Cum. Gas Pr, Gas Prod Ra), and white for pressures and other related data (FCP, FTP, Braiden Heat Separator P, Line PSI, Drill Out Inj F, Choke Size).

The green columns are oil related data, the blue columns are water related, the red columns are gas related, and the white columns are pressures and other related data.

Once on the correct Stop within the Flowback module, enter data similar to Excel. First, ensure that the date range is correct via the Configuration panel. Next, find the day & hour that flowback began and enter your data in the first cell. Users may either click or tab to the next cell. Cells that are skipped while tabbing are calculated cells that will auto-fill once they have all of the necessary data for their calculations.


Important: After any or all flowback data has been entered, users must click the blue Save button in the lower right corner to save their data before navigating away from the screen.

Flowback Insights

Visualization of the Data

The Insights tab within the Flowback module contains the following trending and charting options:

1. Combined Chart (ex. Spot Rate, BOPD, BWPD, CNTL, BOE)
2. Pressure Chart (ex. FTP, FCP, CNTL, Tubing Choke, Casing Choke)
3. Cumulative Chart (ex. Cum. Oil, Cum. Water, Cum. Gas, Load to Recover)
4. Custom Chart Option (user has the option of selecting which attributes to see within the chart)

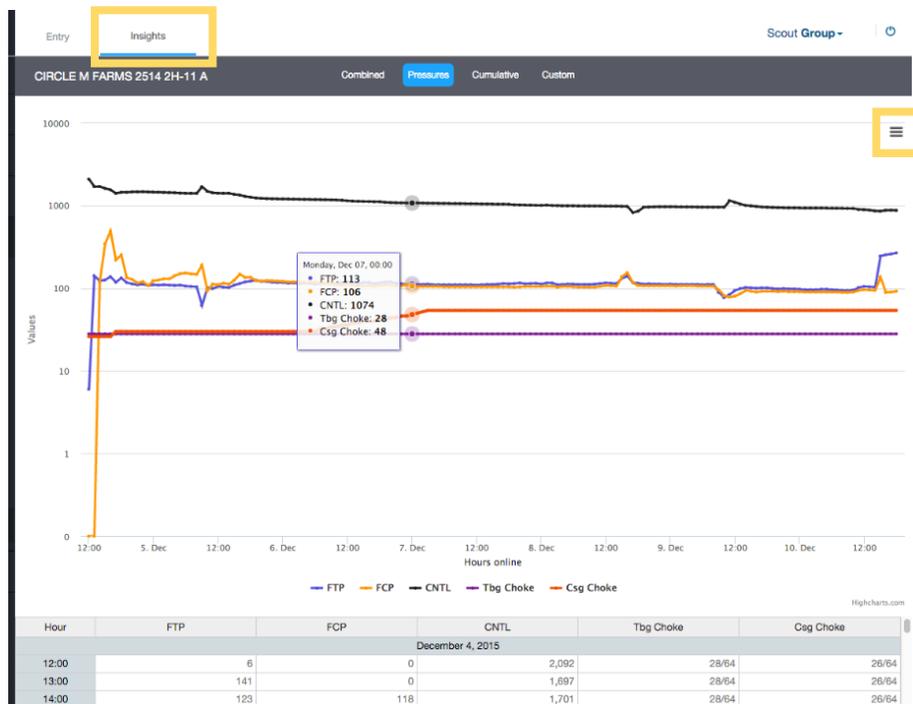

By selecting the three horizontal lines in the top right corner, the user can download the chart as a PDF, PNG, JPG, or SVG image.



Flowback Reports

The Flowback report will be available under the Reports section in the left Navigation panel. This report can also be setup to be automatically distributed, on a frequency determined by the office users. The report within the web portal will have the option of choosing from past and present wells on flowback. An example of the report is below. The report will have various export options, including PDF, Excel, XLSX, CSV, and more.

FLOWBACK REPORT

CIRCLE M FARMS 2514 2H-11

Enertia Id: 01498.01 API #: 35-151-24415-00- Start Date: 12/3/15
 County: Woods State: OK Total Load to Recover: 95,927

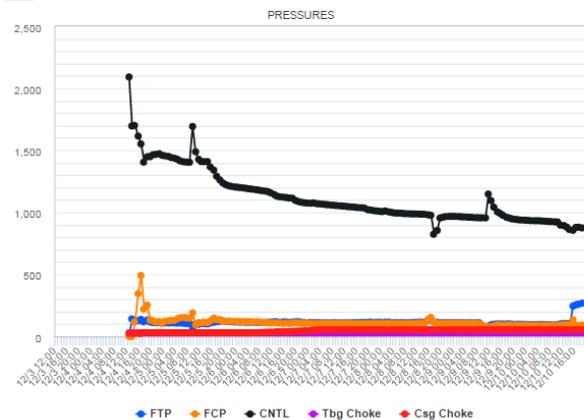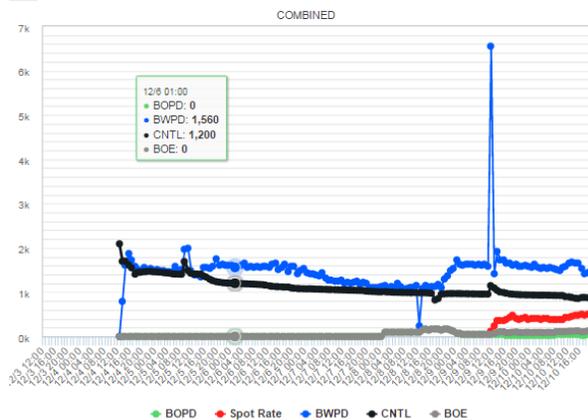

Date	BOPH	BOPD	Cum. Oil	API Gravity	GOR	BWPH	BWPD	Cum. Water	Load to Recover	% Load to Recover	Chlorides	Water %	Spot Rate	Hourly Rate	Cum. Gas	CO2	H2S
12/3/15 12:00 PM																	
12/3/15 1:00 PM																	
12/3/15 2:00 PM																	
12/3/15 3:00 PM																	
12/3/15 4:00 PM																	
12/3/15 5:00 PM																	

Users

Setting up a Flowhand

Within the Users section in the Admin module, in the left Navigation panel, a Flowhand user can be setup. To create a new user, click on the blue Create User button in the top right corner. Fill out the new user's profile and select their role as "Flowhand". The Flowback permissions will automatically populate, and can be changed, if needed. Once the profile has been filled out, click the blue Create User button in the lower right corner.

Scout

NAVIGATION

- Dashboard
- Reports
- Routes
- Flowback
- Events
- Admin
 - Stop Management
 - Users**
 - Purchasers
 - Imports
 - Attributes

CREATE USER

BASIC INFORMATION

First Name Last Name

Email Address Username

SECURITY INFORMATION

Password Confirm Password

TITLE & PERMISSIONS

Select user role or title

Access to Scout Mobile Application

User Title and Permission Instructions
Select the title of the user to default common per the organizational tier to choose the level of hier have access to view and/or enter data. Check ye permission to configure scout access for the use

To edit or delete an existing user profile, click the Edit button to the right of the user's name.

SCOUT USERS

Create User

	FIRST NAME	LAST NAME	USERNAME	TITLE	PERMISSIONS	CREATED	
	Flowhand	1	Flowhand 1	Flowhand	Flowback Edit, Flowback View	11/15/2018 11:17 AM	Edit

FAQ/Support

- Please email your Scout admin with any questions, comments or concerns. This includes:
 - Change requests
 - Reporting needs
 - Scout issues
 - Enhancements
- For support tickets, send an email to support@fdc.io or text 918-992-2081.